


CONNECTION DIAGRAM

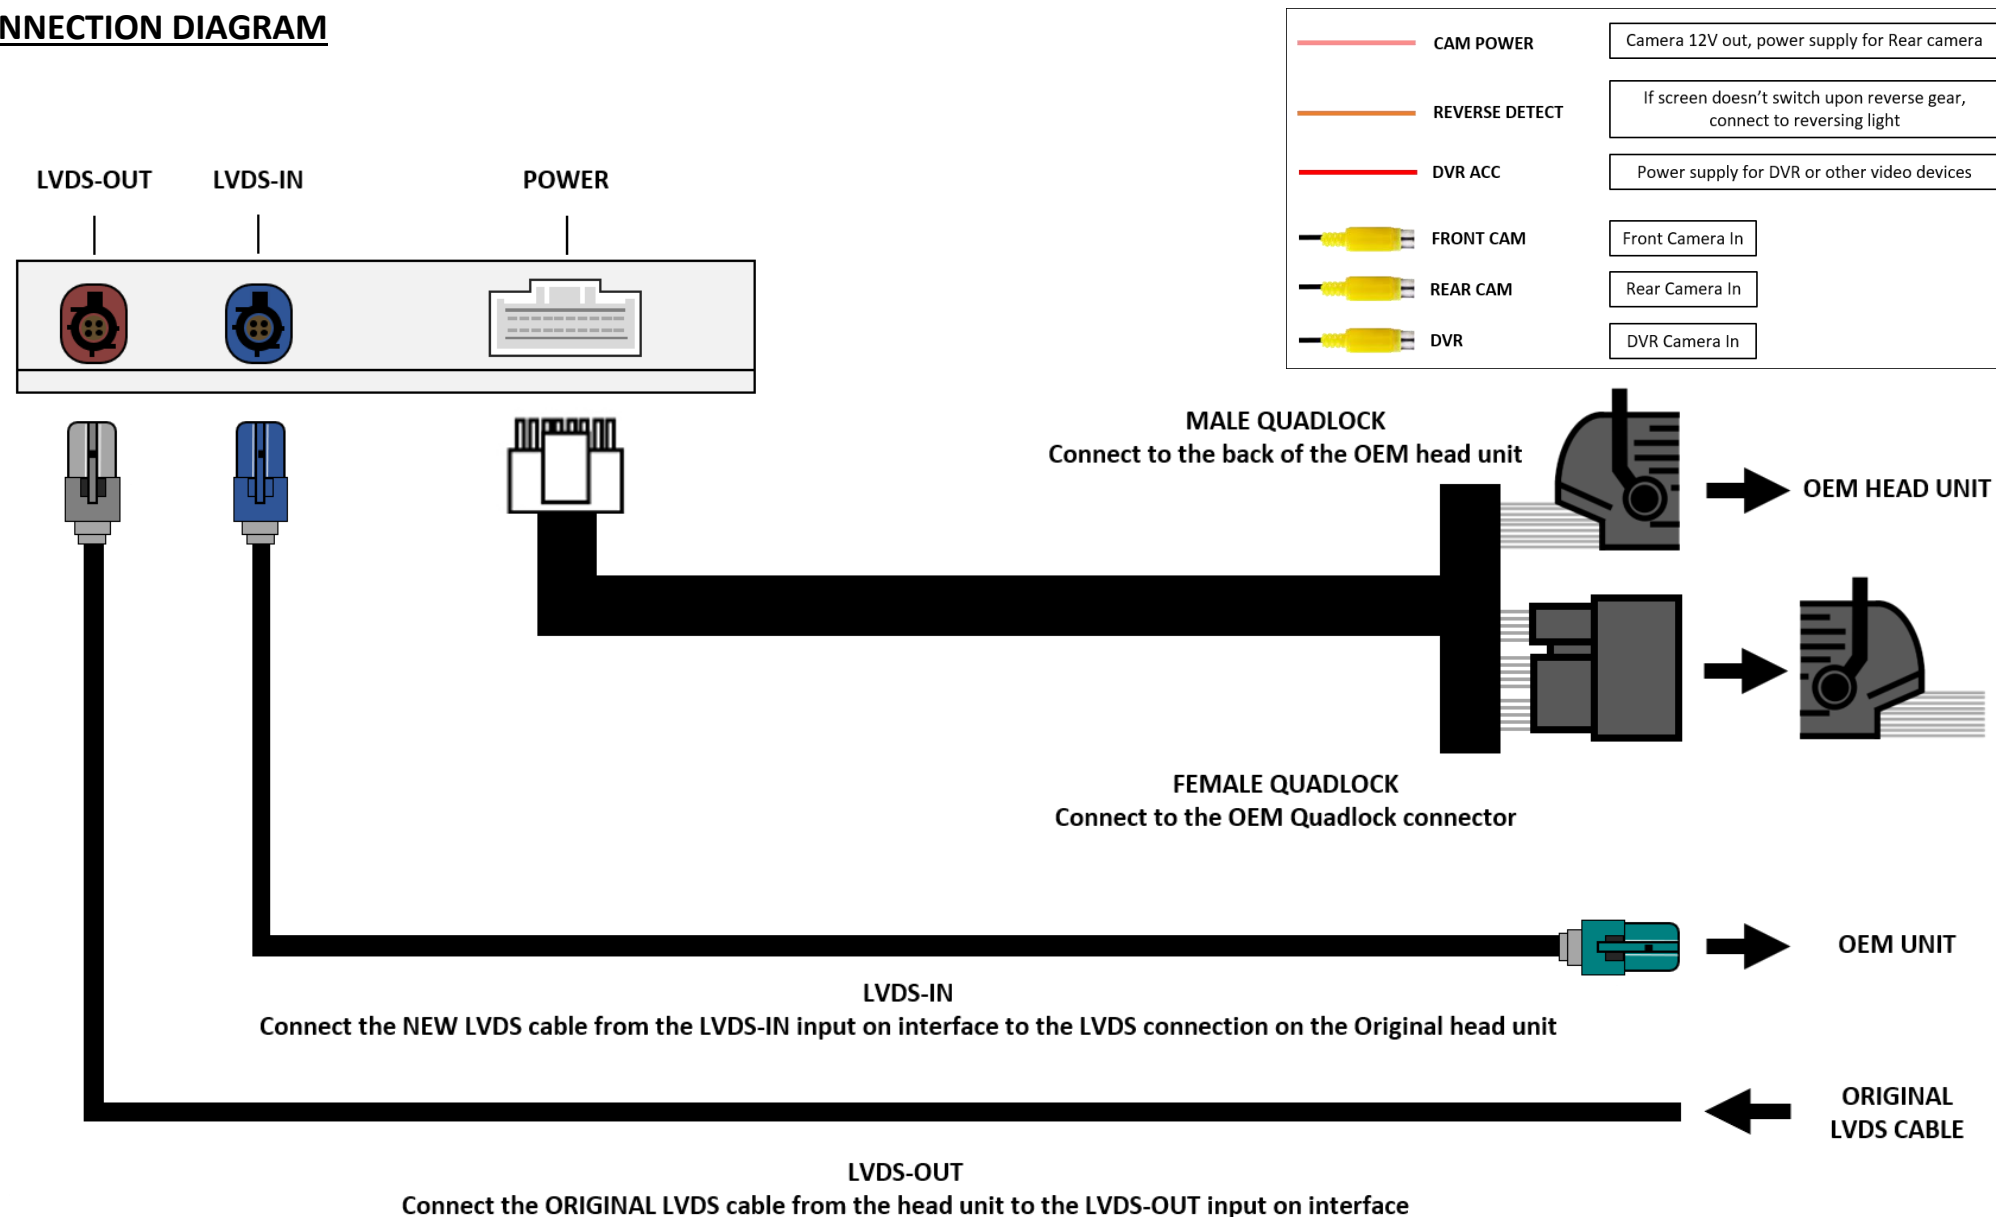

DIP SWITCH SETTINGS

Please disconnect & reconnect interface power after changing any DIP setting



Dip	ON ↓	OFF ↑
1	ON ON OFF	
2		
3		
4	Disable radar	Enable radar
5	Disable parking guide line	Enable parking guide line
6	OFF	
7	OFF	
8	OFF	