


Product List

Use H14 hexagon socket to adjust this screw to adjust the rotation force of the bracket

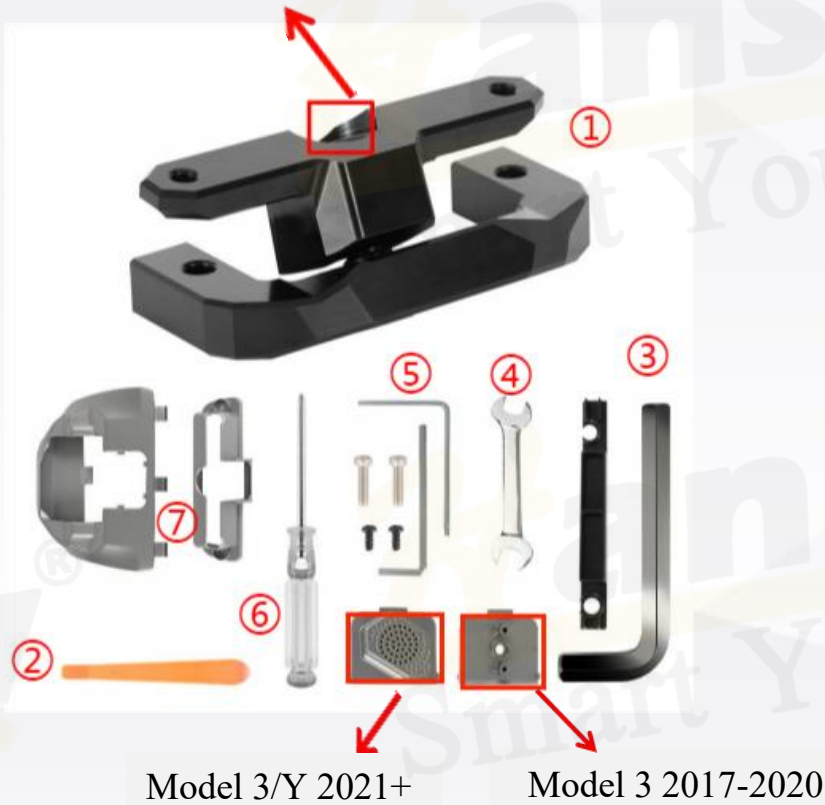

①	Screen Swiveling Mount	⑤	H5 hex wrench
②	pry bar	⑥	Phillips screwdriver
③	H14 hex socket	⑦	shell
④	10 mm wrench		

1. Tools required for installation

Plastic pry tool, Phillips screwdriver, H5 hex wrench, H14 hex socket, 10 mm wrench

2. Installation precautions

- In order to ensure safe installation, this installation manual highlights important notes using the following symbols.

Tip: In order to install more quickly, please read the instructions carefully.

Inspection Before And After Installation

NOTE

1. Check whether the product list is complete and damaged before installation
2. Warning: Do not remove any parts by yourself. Any improper operation is not covered by the warranty.
3. Before installing the product, please turn off the vehicle power and cut off the battery negative pole of the frunk
4. Please watch the installation video and instructions carefully before installation
5. Please confirm whether the installation and wiring are correct before testing after installation.
6. Check whether the installed product functions normally. If there is any problem, please check whether the plug is plugged tightly
7. Check whether the function of the original vehicle is used normally. If there is any problem, please check whether the plug is plugged in tightly.
8. Please do not install the product if you receive a damaged item. Please take photos immediately and provide them to out after-sales team for confirmation. Photos should be provided that include all parts of the product and can display the damage. (If the product is notified of the damage after installation, claims and reissues will not be accepted, and you will need to purchase the parts again at your own expense.)



installation manual



tutorial video

Aftersale Contact

**Phone/whatsapp: +86 130 4421 9654
+1-949 3584 793**

Email: support@hansshow.com

Remove the original car screen



1. Remove the temperature sensor with a pry bar

2. The trim panel is a little difficult to remove, so need to pry it a few more times

3. Remove temperature sensor and rotate it

Remove the original car screen



4. Remove the original vehicle screen with a 10mm open-ended spanner

5. Remove the two fixing screws of the original vehicle screen harness

6. Carefully remove the screen to prevent it from hitting the screen

Remove the original car screen



7. Remove the plastic cover plate of the original vehicle with T25 box spanner

8. Press and pull out the locking clip of the connector here

9. Pad the screen with sponge first , and then put it in place to prevent the screen from sliding and damaging

Install the rotating bracket and the mesh bracket



1. Put the swivel mount kit into the original vehicle bracket hole

2. Fix the bracket with two screws of the original vehicle and tighten it with a 10mm spanner

3. Place the protective cover on one side of the bracket and rotate the bracket on the other side

Install the rotating bracket and the mesh bracket




4 .the snap gasket can be installed if the gap is large. I f the gap i s small , the gasket does not need to be installed

5.Align the hole position and install the buckle at the corresponding position of the original vehicle

6.Connect the screen of the original vehicle and thread the harness into the protective cover first

Install the rotating bracket and the mesh bracket

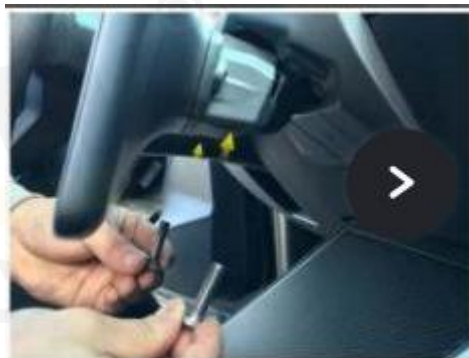

7. Fix it with the original screws

8. Install the screen on the bracket

9. Fix the screen with two HS Torx screws

Install the rotating bracket and the mesh bracket



M3/Y 2021+



M3 17-20



10. Fix the temperature sensor on the base

11. Sort out the harness and fix the buckle gap cover on the base