


## 27-226

Add camera to Citroen C1/Peugeot 108/Toyota Aygo with X-Touch/X-Nav

### Installation diagram

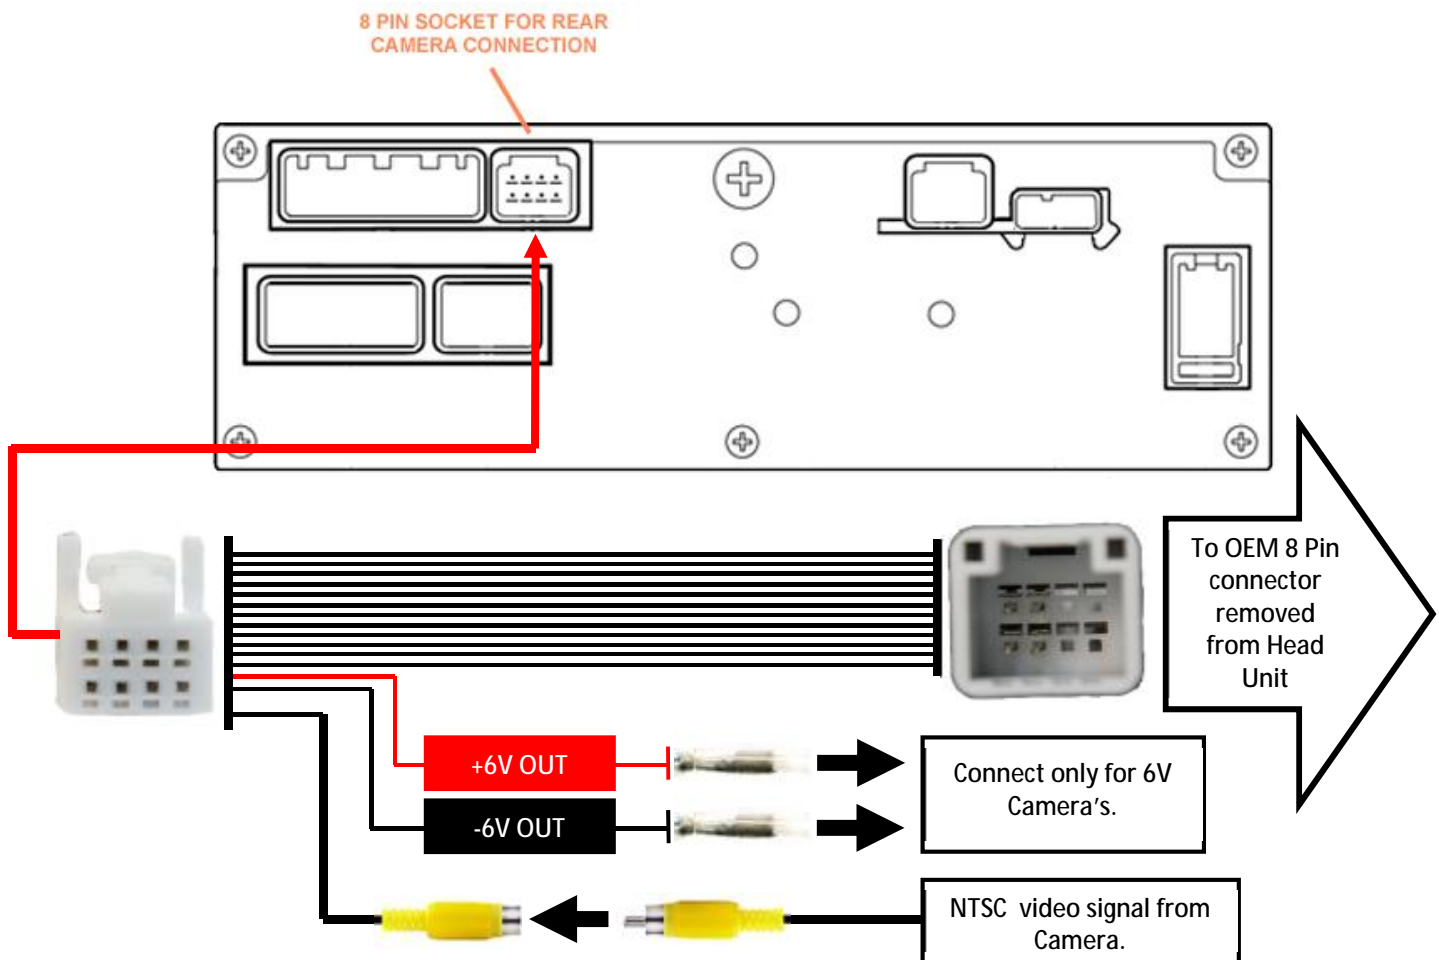

### Installation Instructions

1. Ensure the vehicle's ignition is off and the key has been removed.
2. Remove the standard Head Unit with reference to the manufacturer's instructions.
3. Disconnect the 8-pin from the rear of the Head Unit. And Connect the 8-pin female connector of 27-226 to the connector just removed from the Head Unit.
4. Connect the male 8-pin of 27-226 connector to the Head Unit.
5. Only connect the red and black 6V wires if the camera being using needs an 6V power supply. The camera being used is a 12V camera an alternative ignition live; fused power supply will need to be used.
6. Test the camera fully before re-installing the Head Unit