


CONNECTION DIAGRAM

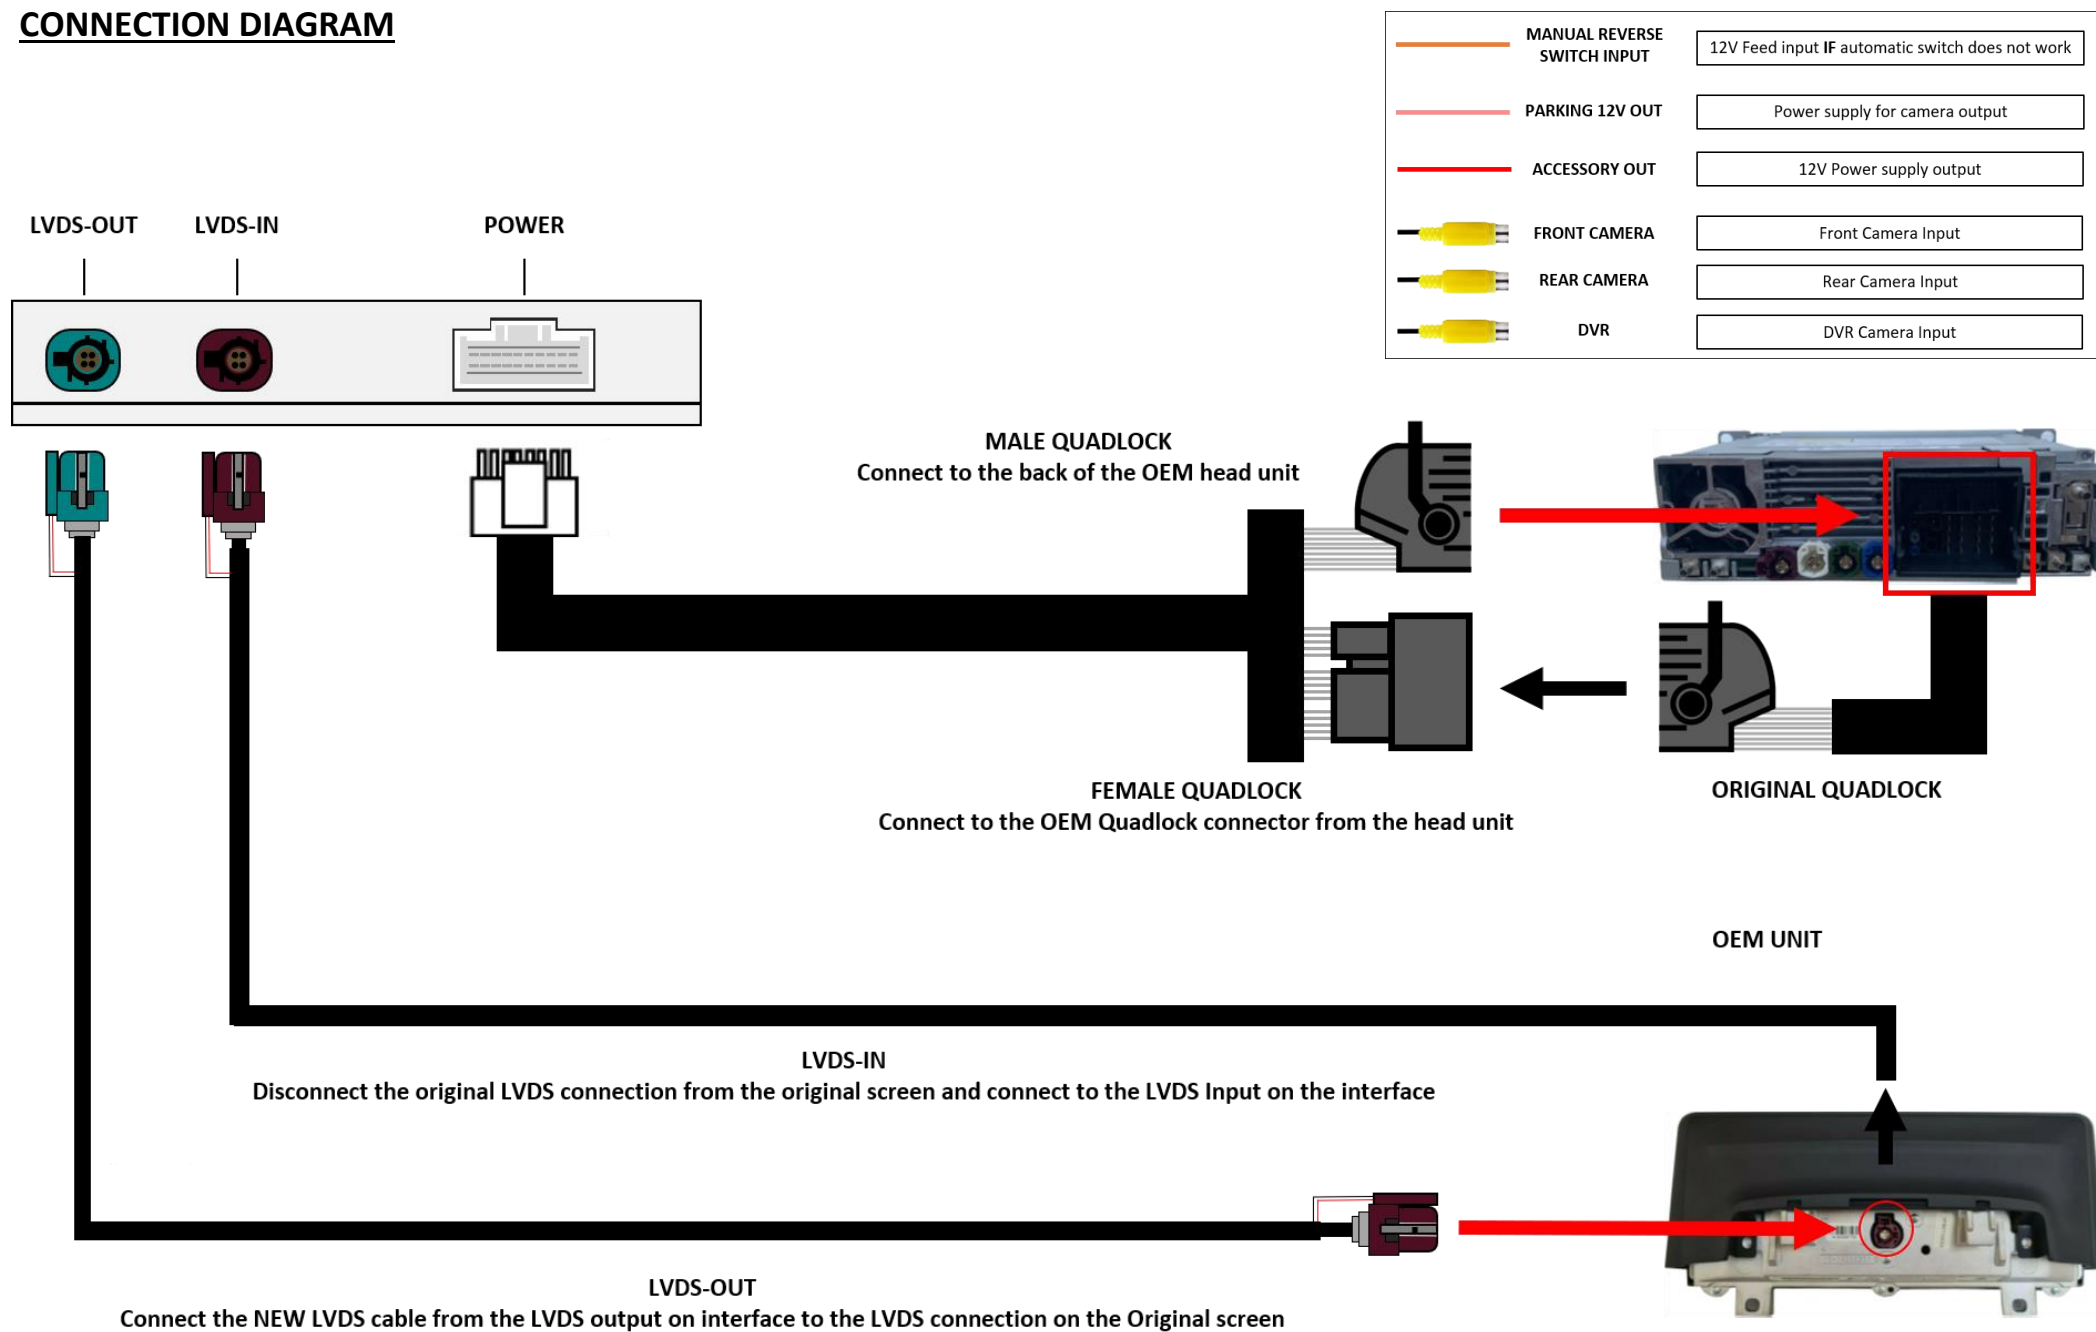

DIP SWITCH SETTINGS

Please disconnect & reconnect interface power after changing any DIP setting

Car Model	No.1	No.2	No.3
1-4 series/X3/X4, 8.8 inch with OEM rear camera	OFF(▲)	OFF(▲)	OFF(▲)
1-4 series/X3/X4, 8.8 inch without OEM rear camera	ON (▼)	OFF(▲)	OFF(▲)
5 series 8.8 inch EVO with rear camera	OFF(▲)	ON(▼)	OFF(▲)
5 series 8.8 inch EVO without rear camera	ON(▼)	ON(▼)	OFF(▲)
1-4 series/X1/MINI 6.5 inch EVO	OFF(▲)	OFF(▲)	ON(▼)
5 series/7 series/X5/X6 10.25 inch EVO	ON(▼)	ON(▼)	ON(▼)

PIN	ON (▼)	OFF(▲)
4	Turn off PDC	Turn on PDC
5	Turn off dynamic guideline	Turn on dynamic guideline
6	-	-
7	Turn on front view	Turn off front view

***Quick Dip Switch Settings**

Mode	4	5	6	7	8
aftermarket camera CAN mode valid	OFF(▲)	OFF(▲)	OFF(▲)	OFF(▲)	OFF(▲)
aftermarket camera CAN mode invalid	ON (▼)	OFF(▲)	OFF(▲)	OFF(▲)	OFF(▲)
original camera	OFF(▲)	ON (▼)	OFF(▲)	OFF(▲)	ON (▼)

*Please note that DIP Switch 5 and DIP Switch 8 put ON (▼) with OEM rear camera

*4,5,6,7,8 OFF, OFF, OFF, OFF, ON

INSTALLATION GUIDE

Please ensure the car is switched off to avoid damaging the interface/ vehicle

STEP ONE

Using a panel tool or similar, carefully prize up the air conditioning panel in the highlighted positions.

Please note: If there are screws on the side panel, please unscrew these first.



STEP TWO

Once the air conditioning has been prized up, pull out the panel cables.

Prize up the plastic panel below the air conditioning unit and remove the screws in the highlighted positions.

Pull out the remaining panel



STEP THREE

Remove the screws in the highlighted positions and pull out the head unit

Please note: If the original quadlock has fibre optic cables, you will need to move these to the new quadlock connector.

Please see pictures

**STEP FOUR**

Disconnect the LVDS from the original screen and connect it to the LVDS input on the new interface.

Connect the NEW LVDS cable from the LVDS output on the interface to the LVDS connection on the Original screen (See Page one)



DVR SWITCHING

Hold the MENU button on iDrive controller for 2-5 seconds to enter DVR mode (If available)

**ADJUST COLOUR/ CONTRAST SETTINGS**

Hold down the centre controller for 4 seconds to enter iDrive menu and adjust colour/ contrast settings

**SWITCH FPG (FLEXIBLE PARKING GUIDELINES) POSITION**

Hold MENU button for about 10 seconds to enter dynamic guidelines mode. Then switch up, down, right, left four directions to adjust dynamic guidelines by turn multimedia buttons.

